


Nvidia Video Display Mode Setup Sheet

To enable dual monitor feature on a Sigmax DVR with Nvidia software loaded, a secondary display device (a TV or a computer monitor) must be connected to DVR first and powered on. Remember: keep the DVR powered off during establishment of the connection.


Note: For a TV, an S-Video connector or a RCA-to-S-Video converter is needed. For a computer monitor, a DVI connector or a VGA-to-DVI converter is needed.

The followings are the steps to complete Nvidia software configuration:

- 1) Once the physical connection is established correctly, turn on the DVR and then exit from DVR software into Windows desktop for Nvidia software configuration.
Note: To exit from DVR software, click on **Sys Setup** button and then choose **General** tab. Locate and click **Advanced** button in System Setup section.
- 2) Right-click on any blank space of Windows desktop to show context menu and then select **Properties**.

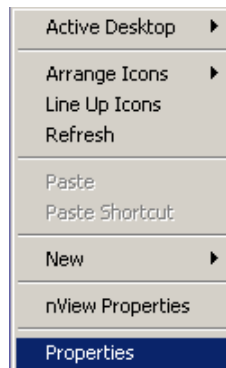


- 3) In the **Display Properties** window (see the next page), click on **Advanced** for more options.

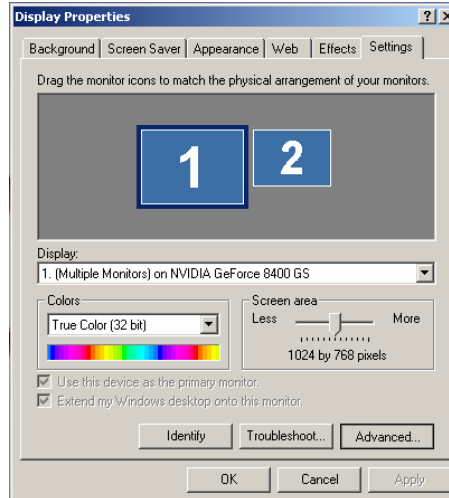

4) Select **Additional Properties** under **GeForce8400GS** tab.



5) In the popup window on the left (see the next page), choose **nView Display Settings** to show primary and secondary displays for different display modes.

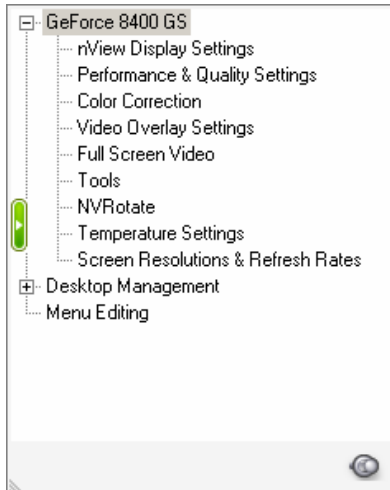

- 6) In the **nView Display Mode** drop-down list, choose either **Dualview** (for spot monitor) or **Clone** (for duplication) and click OK to confirm the changes. The nView software needs a reboot.



- 7) After rebooting the DVR as required earlier, exit from DVR software and go back to Windows desktop again for further adjustment. Repeat Step 1 through Step 5 to show **Additional Properties** window.

- 8) Expand **Desktop Manager** to locate Profiles and then load up one of display profiles that is appropriate for specific applications (spot monitor, clone or main monitor only) and secondary display devices (a TV or a computer monitor).
Main Only --- Enable primary display only.
Clone (TV Only) --- Duplicate primary display content onto a TV as secondary display.
Spot Monitor (CRT Only) --- Enable a computer monitor as secondary display to show different content than primary display.
Spot Monitor (TV Only) --- Enable a TV as secondary display to show different content than primary display.
- 9) Reboot the DVR once again for those changes to take effect. Once the DVR software loads up, dual monitor feature is readily available.